



Acton Memorial Library

Sony Reader Wi-Fi (PRS-T1) Quick Start Guide

You must have access to a wireless Internet connection to download library books. If you do not have access from home, this can be accomplished from the library.

- Press and release the power button on the bottom of the Reader to turn on the device.
- Press the **Home button**  to open the Home screen.
- The Reader is equipped with a touch screen. Most commands are accomplished by tapping words or icons on the screen with a finger or stylus. Tap the **arrow** at the bottom right hand corner of the Home screen, then tap **Public Library**. At this point the Reader will search for and connect to a wireless network.
- Tap in the space below **“Find a Library.”** Tap **?123** to change the on-screen keyboard to number display. Type 01720 and tap the search button. Tap on **Acton Memorial Library**, and then on **Minuteman Digital Media Catalog**.
- Tap **Login**. If you receive a security warning, tap **Continue**.
- Use the on-screen keyboard to type in your **library card number** without the spaces and your PIN. If you do not have a PIN, please call the Reference Desk at 978-929-6543 and we will help set one up for you.
- Tap the **Login** button.
- Tap **“Search”** or **“Browse.”** In this example, we will tap **Browse**.
- Tap **Browse all Adobe EPUB eBook Titles**.
- Tap the small box labeled **“Limit to available titles,”** and then tap **Submit**.
- The display will retrieve the first 10 available titles. Use a finger swipe (from bottom to top) to move the display downward.
- Tap **Next >** at the very bottom of the page to view the next 10 available titles.
- When you find a title you want to read, tap **add to cart**. This will take you to the My Cart screen.
- Tap **Proceed to Checkout**.
- Scroll down a bit to see the bottom of the screen if necessary, and tap **Confirm check out**.
- Tap **Download**.
- The status bar at the top of the screen will read **“Downloading”** and then **“Download complete.”** This usually takes just a few seconds and if you are not watching for it you might miss it. No problem!
- Press the Home button .
- The downloaded book is displayed under the **“Recently Added”** section, next to a **“New”** icon.
- Tap the **book cover** to open the book and begin reading.
- Use the navigation techniques described on the other side of this sheet to move through the book.

If you have any questions please email reference@acton-ma.gov, or call the Reference Desk at 978-929-6543.